
10 ft. x 20 ft. /3 m x 6 m STEEL FRAME CANOPY ITM./ART. 122175 Instruction Manual

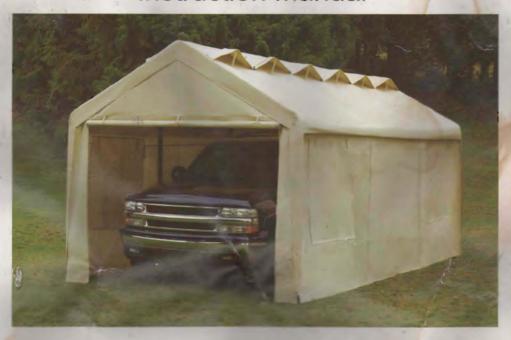

Before assembly, read these instructions carefully.

Assemble the canopy in the location where you intend to use it.

2 or more people are recommended for assembly.

WARNING: Keep all flame and heat sources away from this canopy. This canopy is meant for vehicle/boat storage and should not be utilized as shelter for public gatherings. This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

The use of this canopy during windy, icy or snowy conditions is not recommended. The accumulation of snow and ice on the canopy roof may pose a safety concern. Under severe weather conditions, disassemble your canopy and store indoors.

It is strongly recommended that the canopy remain secure to the ground at all times via the base plates and nylon straps supplied. Avoid placing the unit on soft ground and ground that is prone to flooding.

MADE IN CHINA


For parts or customer service, please call 1-800-867-9018 Monday - Friday, 8:30 am - 4:30 pm Pacific Standard Time

PAPTS LIST

TAINTO LIST			
PART	DESCRIPTION	ILLUSTRATION	QUANTITY
A	Incline Bar	0	8
В	Horizontal Bar		9
С	Post		8
D	3-Way Corner (for horizontal bar)		2
E	3-Way Corner (for post)	3	4
F	4-Way Corner	7	6
G	Base Plate		8
Н	Nut & Bolt		8
1,0	Canopy Roof	The state of the s	1
J	Side Panel with Door		1
K	Side Panel without Door	(E)	1
L	End Panel		2
М	Elastic Ball Strap	0	46
N	Ground Stake	4 Large 8 Small	12
0	Nylon Strap		4 *
THE RESERVE OF THE PARTY OF THE			THE RESERVE OF THE PARTY OF THE

ROOF FRAME ASSEMBLY

Each bar (A, B, and C) has a spring-activated button for locking into the corner pieces. Insert bars into corner pieces as shown in the diagram below.

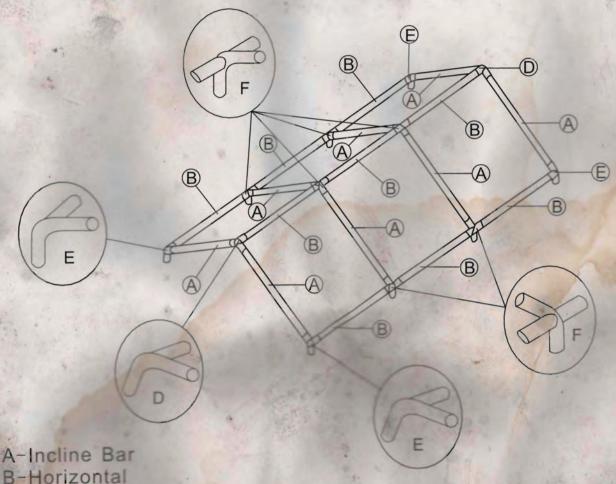


C-3-Way Corner (for horizontal bar)

E-3-Way Corner (for post)

F-4-Way Corner

POST ASSEMBLY - part1


Insert posts (C) into the corners on one side of the assembled roof as shown in the diagram.

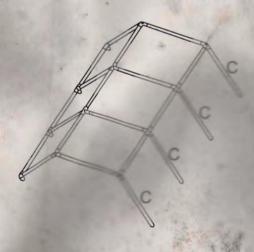

CANOPY ROOF ASSEMBLY


Spread canopy roof (I) over assembled roof frame.

Open the air vents on the canopy roof (I) before proceeding to the next step.

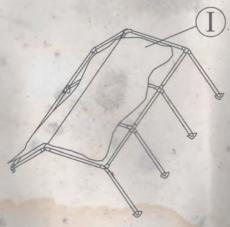


POST ASSEMBLY - part2

Insert the remaining posts (C) into the corners on the other side of the roof as show in the diagram.

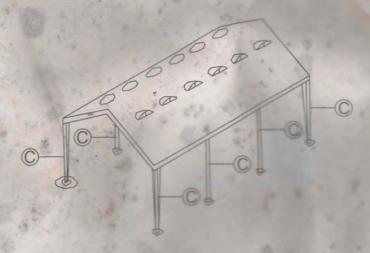


There are hooks attached to the four corners of the canopy roof (I). Insert hooks into the pre-drilled holes on the four corner posts (C). See diagram below.

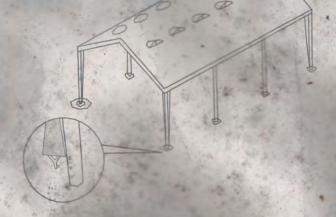

BASE PLATE ASSEMBLY

Insert base plates (G) on to the bottom of the posts (C) and secure using the nuts and bolts (H). There are two sets of holes on the bottom of each post (C). These two sets of holes are provided to help level the frame.

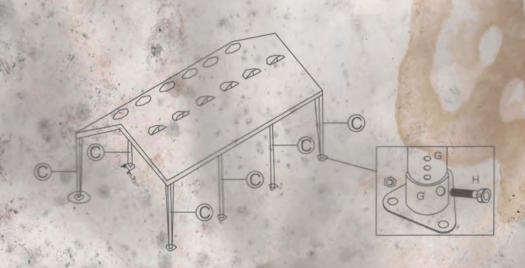


SIDE AND END PANEL ASSEMBLY


Attach the side panel with door (J) using the elastic ball straps (M). Insert the elastic strap through the grommet in the roof (I), then behind the frame, through the grommet in the side panel (U) and then stretch the elastic band over the ball. See diagram below.

Secure straps on the inside of canopy to the posts (C).

Repeat above assembly for the remaining side panel (K) and end panels (L).

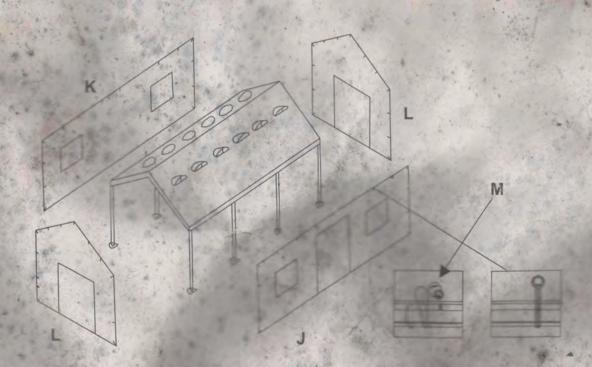

(N) through the base plates (3). Then, tie the nylon strap (O) to each corner of the canopy roof (I) and secure to the 4 pieces remaining bigger ground stakes (N).

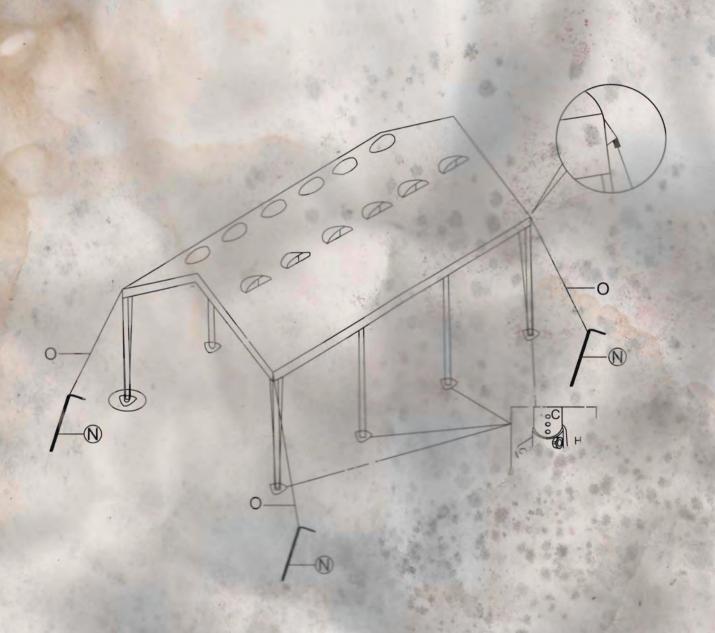

For parts or customer service, please Call 1-800-867-9018 Monday - Friday, 8:30 am - 4:30 pm Pacific Standard Time